

HOW TO paint an interior wall

YOUR CASHBUILD SHOPPING LIST:

- > Matt Acrylic PVA
- > paintbrush
- > paint roller
- > paint tray
- > crack filler
- > sandpaper
- > paint scraper
- > acrylic sealant
- > drop sheet
- > masking tape

GET STARTED:

1 Prepare the room by sweeping and cleaning to get rid of dirt and dust. Lay the drop sheet on the floor to prevent paint from staining the floor.

2 Check the wall for cracks and holes. Use crack filler to fill them.

3 When dry, use sandpaper to smooth uneven patches. You need a smooth surface before you can start with your paint job.

4 Protect skirting boards and wall fittings with masking tape.

5 Apply acrylic sealant to all cracks around wall fittings, doors and windows.

6 Prepare paint by stirring and pouring it into a paint tray. Start painting from one corner of the wall. Use a 45 mm brush to apply paint in the corner.

7 Wait at least four hours before applying the second coat.

8 Remove all masking tape when the paint has dried and clean the working area.

Other useful products include:

- Velvet Sheen, a silky-smooth interior finish for bedrooms, passages, lounge and dining room walls.
- Texguard, a flexible, fine-textured matt finish for exterior plastered walls.
- High Gloss Enamel, a durable interior and exterior paint with a high-gloss finish for steel door- and window frames, gates, cupboards and furniture.
- Eggshell Enamel, a long-lasting interior paint with a semi-sheen finish for kitchen and bathroom walls.
- Acrylic Roof Paint, a durable exterior roof paint with a matt finish suitable

for all types of roofs including cement tiles and galvanised iron surfaces.






- Timbercoat Varnish, a general purpose ultraviolet-protection varnish with a glossy finish for interior and exterior wooden surfaces such as doors, windows and knotty pine ceilings.



For enquiries about Cashbuild's products and services call your nearest store or the Cashbuild Customer Care line on **0860-100-582**.



Painting interior walls needn't be a drag. Here's how to do it in a few easy steps using **Cashbuild's** help and products

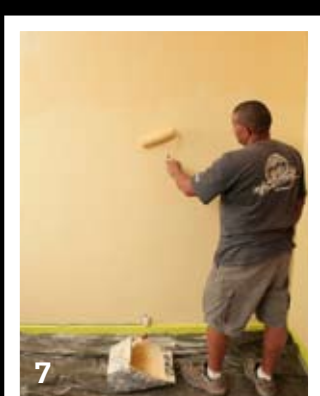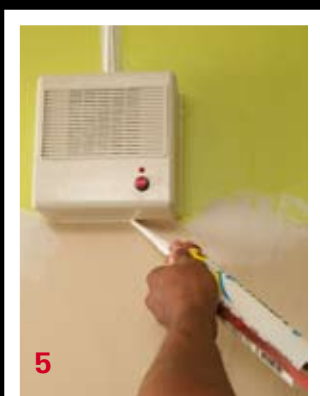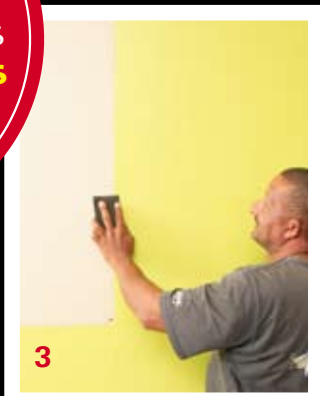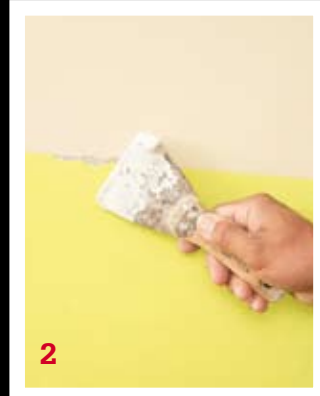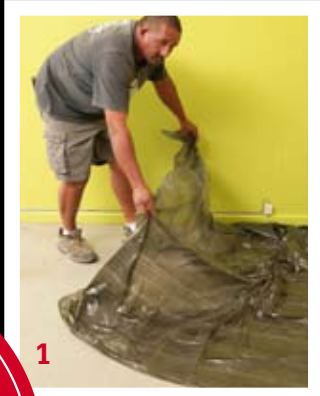

TIPS

■ Inside walls need two coats of paint. Allow enough time for the paint to dry before applying the second coat.

■ Keep all doors and windows open to ensure proper airflow in the room. This helps the wall to dry in the recommended time.