


Install a lockset **PROJECT 8**

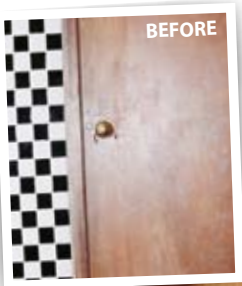

YOU'LL NEED

Bosch electric drill, 8 mm chisel, 25 mm chisel, Phillips screwdriver, claw hammer, Champion interior lockset (brass)

STEP 1

Hold the lock against the edge of the door opening and mark the perimeter and position of the handle with a pencil.



STEP 2

Drill the hole for the handle mechanism.



STEP 3

Chisel the opening in the edge of the door.



STEP 4

Insert the lockset and secure with screws.



Adjustable height stool R495, Coricraft.

TIP: LOOK AT THE MAKE OF YOUR OLD LOCK AND TRY TO REPLACE IT WITH A LOCK OF THE SAME BRAND. THIS WILL MAKE INSTALLATION EASIER AS SIZES ARE UNLIKELY TO VARY AND YOU CAN USE THE SAME OPENINGS.