



# INSTALLING CEILING TILES


1.

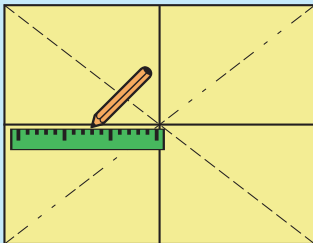


2.

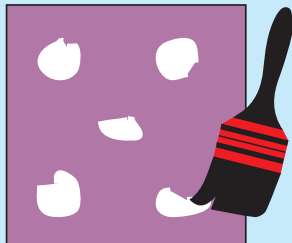

3.

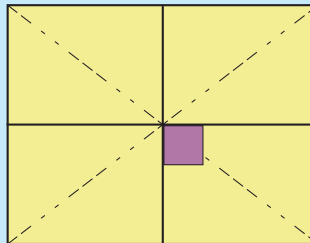

4.

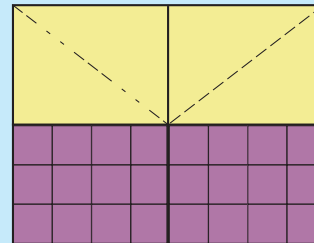

## INSTRUCTIONS ON INSTALLATION OF CEILING TILES

**TYPES OF SURFACES** - Ceiling tiles can be fixed onto dry plaster, concrete, aerated concrete, plaster boards, chipboards and wood.

**SURFACE PREPARATION** - The surface must be dry, free of grease, hard, quite smooth and absorbant, free of old wallpaper and glue. Very absorbant surfaces must be sealed with a primer of DECOR adhesive diluted with water in a 1:6 ratio. Flaking plaster must also be sealed with primer. A surface that has been affected by fungus needs to be thoroughly cleaned.

**FITTING THE CEILING TILES** - For fixing ceiling tiles to the ceiling use DECOR adhesive.

**STEP 1.** Draw straight lines dividing the ceiling into four equal rectangles by starting with a cross in the middle. All lines should be parallel to the walls.

**STEP 2.** Put DECOR adhesive on the back of the tile in all four corners and in the middle as shown in the illustration.

**STEP 3.** Place the tile on the cross in the middle of the ceiling and press lightly against the ceiling, so that the glue sticks firmly.

**CAUTION! WIPE EXCESS GLUE AWAY IMMEDIATELY WITH WATER AND A SPONGE.**

**STEP 4.** Work your way towards the walls. Finish the edges off with moulded cornices.