
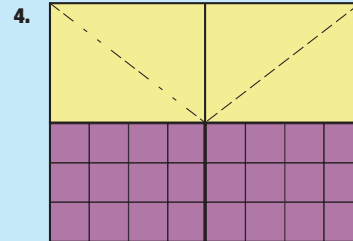
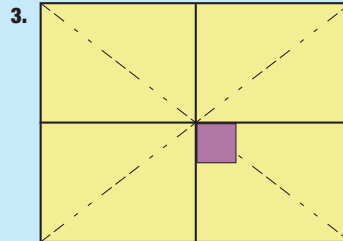
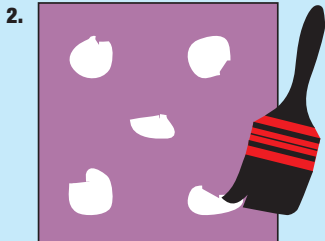


INSTALLING CEILING TILES

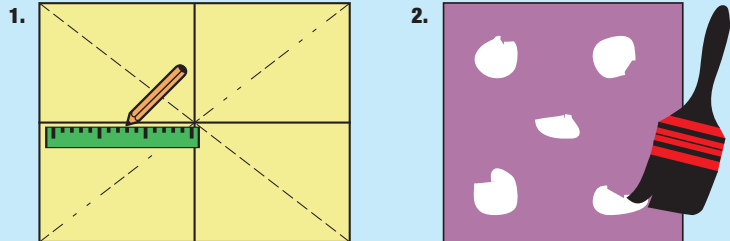

INSTRUCTIONS ON INSTALLATION OF CEILING TILES

TYPES OF SURFACES - Ceiling tiles can be fixed onto dry plaster, concrete, aerated concrete, plaster boards, chipboards and wood.

SURFACE PREPARATION - The surface must be dry, free of grease, hard, quite smooth and absorbant, free of old wallpaper and glue. Very absorbant surfaces must be sealed with a primer of DECOR adhesive diluted with water in a 1:6 ratio. Flaking plaster must also be sealed with primer. A surface that has been affected by fungus needs to be thoroughly cleaned.

FITTING THE CEILING TILES - For fixing ceiling tiles to the ceiling use DECOR adhesive.

STEP 1. Draw straight lines dividing the ceiling into four equal rectangles by starting with a cross in the middle. All lines should be parallel to the walls.

STEP 2. Put DECOR adhesive on the back of the tile in all four corners and in the middle as shown in the illustration.

STEP 3. Place the tile on the cross in the middle of the ceiling and press lightly against the ceiling, so that the glue sticks firmly.

CAUTION! WIPE EXCESS GLUE AWAY IMMEDIATELY WITH WATER AND A SPONGE.

STEP 4. Work your way towards the walls. Finish the edges off with moulded cornices.